



SS1000 PORTABLE CO₂ GAS ANALYZER

FOR NATURAL GAS

Product Code 10603


KEY FEATURES

- Virtually maintenance free
- No interference from glycol, methanol or amine contaminants (vapor phase)
- Fast and accurate real-time measurements
- No wet-up or dry-down delays
- Short term payback; no consumables
- NIST-traceable calibration

SpectraSensors SS1000 Portable is a light weight, easy to handle, battery-powered CO₂ analyzer, used to verify measurements and for spot-checking when other methods provide questionable results.

In natural gas pipeline applications, poor quality measurement results are extremely costly. Additional processing or dehydration costs, upset conditions, shut-ins and inconsistent process results may be caused by sensors that do not perform properly. The SS1000 reveals poorly performing sensors, pinpoints high moisture and can be used as a standard for measurement validation.

RAPID RESPONSE TIME The SS1000 allows for fast, simple operation. The analyzer's laser and detector take measurements 4 times per second and average the results. These real-time measurements are not hampered by wet-up (absorption) or dry-down (desorption) as with surfaced-based sensors.

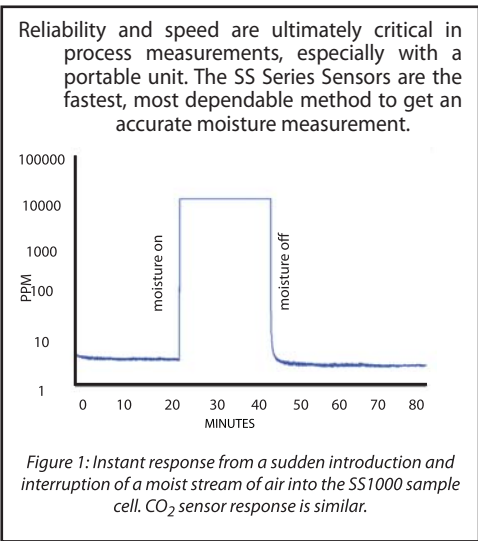

RELIABLE Using state-of-the-art laser technology developed by NASA, the SS1000 analyzer is more reliable, with greater repeatability than surface based sensors and is not subject to the interpretation errors of a chilled mirror.

NO INTERFERENCE As with all SpectraSensors analyzers, the SS1000 combines a patented laser with control electronics and "smart" software. The analyzer's sensor heads are not subjected to corrosives or contaminants in the gas because the sensor is isolated from the sample gas stream.

The result is an analyzer which does not suffer from contamination or drift due to vapor impurities such as glycol, methanol, amines, hydrogen sulfide, or mercaptans.

PAYBACK The SS1000 very quickly pays for itself eliminating the cost of consumables, extra sensor heads, factory calibrations and labor and overhead associated with excessive maintenance. Expensive problems caused by unreliable gas measurements such as added processing steps and poor gas quality can be eliminated.

SS1000 Portable Carbon Dioxide Analyzer

SPECIFICATIONS

Application Data

Target Components	CO ₂ in Natural Gas
Typical Measurement Ranges	0-10%*
Typical Precision	±1% of reading or ±0.04ppmv (400ppmv) whichever is greater
Measurement Response Time	0.25-2 seconds (Total system response is dependent on flow rate and sample system volume)
Principle of Measurement	Tunable Diode Laser Absorption Spectroscopy
Environmental Temperature Range	-20° to 50° C (-4° to 122° F)
Sample Inlet Pressure	10 to 25 PSIA, 10 PSIG Maximum (70-170kPa Abs, 70kPaG maximum)
Sample Cell Temperature Range	-20° to 50° C (-4° to 122° F)
Maximum Cell Pressure	70kPag (10 PSIG)
Sample Flow Rate	0.1-10 L/min (0.2 to scfh)
Recommended Validation	Binary Cal Gas Bottle with Methane Background



Electical Data

Power Supply	100-240 VAC, 50-60 Hz standard 12-Volt, Sealed Lead-Acid Battery Approx. 8 hours usage time per charge
Max Current	0.5A @ 120 VAC during recharging
Communication	RS232C - all parameters
LCD Display	Concentration, Cell Pressure and Temperature & Diagnostics

Physical

Dimensions	Nominal 200 mm H x 175 mm W x 450 mm D (8" H x 7" W x 18" D)
Weight Approximately	Approx. 6.8Kg (15lbs)
Sample Cell Dimensions	438 mm H x 108 mm W (17 1/4"H x 4 1/4"W)
Sample Cell Construction	316L Series Polished Stainless Steel Standard
Number of Sample Cells	1

Area Classification

Certification	Non-Hazardous (certified) locations - General Purpose
---------------	---