

Safety Instructions

J22 TDLAS Gas Analyzer

ATEX/IECEX: Zone 1

cCSAus: Class I, Division 1/Zone 1



Safety instructions for J22 TDLAS Gas Analyzer with and without SCS for explosion-hazardous areas classified according to the National Electrical Code (NEC), Canadian Electrical Code (CEC), International Electrotechnical Commission (IEC) and Directive 2014/34/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws Member States.

Table of Contents

1	Introduction	3
	Intended Equipment Use	3
	Associated Documentation	3
	Company Overview	4
	Manufacturer's Certificates	4
	Manufacturer Address	5
2	General	6
	Symbols Used	6
	Safety symbols	6
	Informational symbols	6
	Electrical symbols	6
	Labels	7
	Nameplate	7
	Controller	7
	Personnel Qualifications	7
	General	8
	Equipment Training	8
	Potential Risks Affecting Personnel	8
	Electrocution hazard	9
	Laser safety	9
	Analyzer Technical Specifications	9
	Electrostatic discharge	12
	Chemical compatibility	12
3	Equipment Installation	13
	Required Hardware/Tools	13
	Tools symbols	13
	Lifting/Carrying the Analyzer	13
	Mounting the Analyzer	14
	Opening/Closing the Analyzer Enclosure	15
	Protective Chassis and Ground Connections	15
	Protective ground cable	15
	Ground connections	16
	Electrical Wiring Requirements	17
	Wire temperature rating and torque	17
	Cable entries	17
	Threaded entries	18
	Connection Values: Signal Circuits	18
	Terminal assignment	18
	Safety-related values	19
	Modbus interface cable specification	19
	Electrical Circuit Breakers	19
	Connecting the Gas Supply	20
	Sample System Heater	20

4	Equipment Operation	21
	Operating Controls	21
	Commissioning	21
	Decommissioning	21
	Intermittent operation	21
5	Maintenance and Service	23
	Cleaning and Decontamination	23
	To clean the J22 exterior	23
	Troubleshooting and Repairs	23
	Replacing the membrane separator filter	23
	Enclosure purge (optional)	24
	With a gas sensor	24
	If no appropriate gas sensor is available	24
	Sample system purge (optional)	24
	Repair verification	24
	Power termination covers	25
	Spare Parts	25
	Service Contact	25

1 Introduction

SpectraSensors' J22 TDLAS Gas Analyzer is a laser-based extractive analyzer for measuring gas concentration. The technology employed is Tunable Diode Laser Absorption Spectroscopy (TDLAS). Typical measurement ranges vary between 0-10 parts-per-million by volume (ppmv) and 0-100% by volume.

Intended Equipment Use

The J22 TDLAS Gas Analyzer is intended for use as instructed in the documentation package provided with the equipment. This information should be read and referenced by anyone installing, operating or having direct contact with the analyzer. Any use of the equipment in a manner not specified by SpectraSensors could impair the protection provided by the equipment.

Associated Documentation

All documentation is available:

- On the USB flash drive provided
- SpectraSensors' website: www.spectrasensors.com

Each analyzer shipped from the factory is packaged with documents specific to the model that was purchased. This document is an integral part of the complete document package, which includes:

Part Number	Document Type	Description
4900002276	Brief Operating Instruction	A quick guide to specialists for installing the device. <ul style="list-style-type: none"> ▪ Installation ▪ Commissioning
4900002277	Operating Instruction	A complete overview of the operations required to install, commission and maintain the device.
4900002278	Device Parameters Description	Provides a detailed explanation for each parameter and Modbus-specific information in the Expert operating menu. This document is intended for personnel working with the device over the entire life cycle to perform specific tasks.

Part Number	Document Type	Description
4900002280	Web Server Instruction	Instruction for operating aspects of the device through a Web server. This document is intended for personnel working with the device over the entire life cycle to perform specific tasks.
4900002282	Technical Information	Provides technical data on the device with an overview of associated models available.

Company Overview

SpectraSensors, Inc. is a leading manufacturer of optical gas analyzers. Headquartered in Houston, Texas, SpectraSensors was incorporated in 1999 as a spin-off of the NASA/Caltech Jet Propulsion Laboratory (JPL) for the purpose of commercializing space-proven measurement technologies initially developed at JPL. SpectraSensors was acquired by the Endress+Hauser Group in 2012.

Manufacturer's Certificates

cCSAus Certificate of Conformity
Certificate number: CSA21CA80053040

ATEX/IECEX Certificate of Conformity
Certificate number: IECEX SIR 20.0035X / CSANe 20ATEX1197X

J22 TDLAS Gas Analyzer, J22 TDLAS Gas Analyzer with SCS on Panel, J22 TDLAS Gas Analyzer with Enclosed SCS, J22 TDLAS Gas Analyzer with Enclosed SCS, with Heater	
ATEX	IECEx
EN IEC 60079-0:2018 EN 60079-1:2014 + AC:2018-09 EN 60079-11:2012 EN 60079-28:2015 EN ISO 80079-36:2016+AC:2019	IEC 60079-0:2017 Ed. 7.0 IEC 60079-1:2014+COR1:2018 Ed. 7 IEC 60079-11:2011 Ed. 6.0 IEC 60079-28:2015 Ed. 2.0 ISO 80079-36:2016+COR1:2019 Ed. 1
cCSA	CSAus
CAN/CSA-C22.2 No. 60079-0:19 CSA C22.2 No. 60079-1:16 CAN/CSA-C22.2 No. 60079-11:14 CAN/CSA-C22.2 No. 60079-28:16 CSA C22.2 No. 30-M1986 (R2016) CSA C22.2 No. 60529:16 CSA C22.2 No. 94.2-15 CSA C22.2 No. 0-10 (R2015) CSA C22.2 No. 61010-1-12, UPD1:2015, UPD2:2016, AMD1:2018	ANSI/UL 60079-0-2019 Seventh Edition ANSI/UL 60079-1:2015 Seventh Edition ANSI/UL 60079-11:2013 Seventh Edition UL 60079-28 Second Edition UL 913 Eighth Edition FM 3600:2018 FM 3615:2018 ANSI/UL 50E:2015 UL 61010-1 Ed. 3, AMD1:2018




**Manufacturer
Address**

SpectraSensors, Inc.
 An Endress+Hauser Company
 11027 Arrow Route
 Rancho Cucamonga, CA 91730
 United States
www.spectrasensors.com


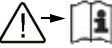
2 General

Symbols Used


Safety symbols

Symbol	Description
	This symbol alerts the user to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury or damage to the equipment.
	Hazardous voltage and risk of electric shock.
	INVISIBLE LASER RADIATION - Avoid exposure to the beam. Class 3R Radiation Product. Refer servicing to manufacturer-qualified personnel.

Informational symbols


Symbol	Description	Symbol	Description
	Indicates additional information		Refer to the manual for more information.

Electrical symbols

Symbol	Description
	Protective Earth (PE) A terminal which is bonded to conductive parts of equipment for safety purposes and is intended to be connected to an external protective earthing system.

Labels

Nameplate

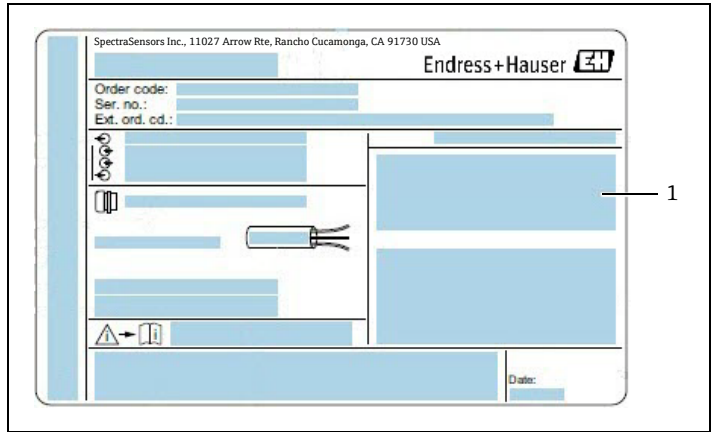

1 WARNING - Potential Electrostatic Discharge

Controller

POWER

Nicht unter Spannung offen
 Do not open when energized
 Ne pas ouvrir sous tension

*Terminate power prior to accessing
 equipment to prevent damage to
 the analyzer.*

Warning: DO NOT OPEN IN
 EXPLOSIVE ATMOSPHERE
 Attention: NE PAS OUVRIR EN
 ATMOSPHERE EXPLOSIVE

*Use caution before opening the
 analyzer enclosure to avoid injury.*

**Personnel
 Qualifications**

Personnel must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device. This includes, but is not limited to:

- Be suitably qualified for their role and the tasks they perform
- Be trained in explosion protection
- Be familiar with national and local regulations and guidelines (e.g., CEC, NEC and/or ATEX/IECEx)
- Be familiar with lockout/tag-out procedures, toxic gas monitoring protocols and PPE (personal protection equipment) requirements

General

- Adhere to all warning labels to prevent damage to the unit.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by SpectraSensors.
- Only open the controller cover if the following conditions are met:
 - An explosive atmosphere is not present.
 - All device technical data is observed (see nameplate).
 - The optional stainless steel label tag is not bonded to earth. The maximum average capacitance of the tag determined by measurement is maximum 30 pF. This shall be considered by the user to determine suitability of the equipment in a specific application.
- In potentially explosive atmospheres:
 - Do not disconnect any electrical connections while the equipment is energized.
 - Do not open the connection compartment cover when energized or the area is known to be hazardous.
- Install the controller circuit wiring according to the Canadian Electrical Code (CEC) respective National Electrical Code (NEC) using threaded conduit or other wiring methods in accordance with articles 501 to 505, and/or IEC 60079-14.
- Install the device according to the manufacturer's instructions and regulations.
- The flameproof joints of this equipment are other than the minimums specified in IEC/EN 60079-1 and shall not be repaired by the user.



Substitution of components is not permitted.
Substitution of components may impair intrinsic safety.

Equipment Training

Refer to local service providers for installation and operational training of the J22 TDLAS Gas Analyzer.

Potential Risks Affecting Personnel

This section addresses the appropriate actions to undertake when faced with hazardous situations during or before service of the analyzer. It is not possible to list all potential hazards within this document. The user is responsible for identifying and mitigating any potential hazards present when servicing the analyzer.



Technicians are expected to be trained and follow all safety protocols that have been established by the customer in accordance with the area hazard classification to service or operate the analyzer. This may include, but is not limited to, toxic and flammable gas monitoring protocols, lockout/tagout procedures, the use of personal protective equipment (PPE) requirements, hot work permits and other precautions that address safety concerns related to the use and operation of process equipment located in hazardous areas.

Electrocution hazard

1. Shut off power at the main disconnect external to the analyzer.



Complete this action before performing any service that requires working near the main input power or disconnecting any wiring or other electrical components.

2. Only use tools with a safety rating for protection against accidental contact with voltage up to 1000V (IEC 900, ASTF-F1505-04, VDE 0682/201).

Laser safety

The J22 TDLAS Gas Analyzer is a Class 1 laser product, which poses no threat to equipment operators. The laser internal to the analyzer controller is classified Class 3R and could cause eye damage if the beam is viewed directly.






Before servicing, shut off all power to the analyzer.

Analyzer Technical Specifications


Technical specifications are provided in the following tables that outline recommended equipment settings, ratings, and physical specifications.

Electrical & Communications		
Input Voltages	100 to 240 VAC tolerance $\pm 10\%$ 50/60 Hz, 10W ¹ 24 VDC tolerance $\pm 20\%$, 10W $U_M = 250$ VAC Heater 100-240 VAC tolerance $\pm 10\%$ 50/60 Hz, 80W	
Output Type	Modbus RS485 (IO1)	$U_N = 30$ VDC $U_M = 250$ VAC N = nominal, M = maximum
	Relay Output (IO2 and/or IO3)	$U_N = 30$ VDC $U_M = 250$ VAC $I_N = 100$ mA DC/500 mA AC
	Configurable IO (IO2 and/or IO3)	$U_N = 30$ VDC $U_M = 250$ VAC
Application Data		
Environmental Temperature Range/ Sample Cell Temperature Range	Storage (analyzer and analyzer on panel): -40 °C to +60 °C (-40 °F to +140 °F) Storage (analyzer with enclosed SCS ²): -30 °C to +60 °C (-22 °F to +140 °F) Operation: -20 °C to +60 °C (-4 °F to +140 °F)	
Environmental Relative Humidity	80% to temperatures up to 31 °C decreasing linearly to 50% RH at 40 °C	
Environment: Pollution Degree	Rated Type 4X and IP66 for outdoor use and considered pollution degree 2 internally	
Altitude	Up to 2,000 m	
Sample Inlet Pressure	140 to 310 kPaG (20 to 45 psi)	
Measurement Ranges	0 to 500 ppmv (0 to 24 lb/mmscf) 0 to 2000 ppmv (0 to 95 lb/mmscf) 0 to 6000 ppmv (0 to 284 lb/mmscf)	

- 1 Transient over-voltages according to Over Voltage Category II.
- 2 Sample Conditioning System.

Application Data	
Sample Cell Operating Pressure Range	800 to 1200 mbara (standard) 800 to 1700 mbara (optional)
Sample Flow Rate	0.5 to 1.0 slpm (1-2 scfh)
Bypass Flow Rate	0.5 to 1.0 slpm (1-2 scfh)
Area Classification	
J22 TDLAS Gas Analyzer	<p>cCSAus: Ex db ia op is IIC T4 Gb Class I, Zone 1, AEx db ia op is IIC T4 Gb Class I, Division 1, Groups A, B, C, D, T4 Tambient = -20 °C to +60 °C</p> <p>ATEX/IECEX:  II 2G Ex db ib op is IIC T4 Gb Tambient = -20 °C to +60 °C</p>
J22 TDLAS Gas Analyzer with SCS ² on Panel	<p>cCSAus: Ex db ia op is IIC T4 Gb Class I, Zone 1, AEx db ia op is IIC T4 Gb Class I, Division 1, Groups A, B, C, D, T4 Tambient = -20 °C to +60 °C</p> <p>ATEX/IECEX:  II 2G Ex db ib op is h IIC T4 Gb Tambient = -20 °C to +60 °C</p>
J22 TDLAS Gas Analyzer with Enclosed SCS ²	<p>cCSAus: Ex db ia op is IIC T4 Gb Class I, Zone 1, AEx db ia op is IIC T4 Gb Class I, Division 1, Groups A, B, C, D, T4 Tambient = -20 °C to +60 °C</p> <p>ATEX/IECEX:  II 2G Ex db ib op is h IIC T4 Gb Tambient = -20 °C to +60 °C</p>

2 Sample Conditioning System.

Area Classification	
J22 TDLAS Gas Analyzer with Enclosed SCS ² , with Heater	<p><u>cCSAus</u>: Ex db ia op is IIC T3 Gb Class I, Zone 1, AEx db ia op is IIC T3 Gb Class I, Division 1, Groups B, C, D, T3 Tambient = -20 °C to +60 °C</p> <p><u>ATEX/IECEX</u>:  II 2G Ex db ib op is h IIC T3 Gb Tambient = -20 °C to +60 °C</p>
Ingress Protection	Type 4X, IP66

2 Sample Conditioning System.

Electrostatic discharge

The coating and the adhesive label is non-conducting and may generate an ignition capable level of electrostatic discharge under certain extreme conditions. The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions, such as high pressure steam, which may cause a build-up of electrostatic charges on non-conducting surfaces. To clean the equipment, use only a damp cloth.

Chemical compatibility

Never use vinyl acetate or acetone or other organic solvents to clean the analyzer housing or labels.

3 Equipment Installation



The safety of the analyzer is the responsibility of the installer and the organization he/she represents.

Use appropriate protective safety equipment as recommended by local safety codes and practices (e.g., hard hat, steel-toe shoes, gloves, etc.) and exercise caution particularly when installing equipment at a height (i.e., one (1) meter above ground).

Required Hardware/Tools

- Mounting hardware (e.g., spring nuts, machine screws and nuts to fit the size of the mounting hole)



Mounting hardware used for wall-mounting the J22 must be able to support four times the weight of the approximately 19 kg (40 lbs) to 43 kg (95 lbs) depending on configuration).

- Stainless steel tubing (SpectraSensors recommends using electro-polished seamless stainless steel tubing, 6 mm [1/4 in.] O.D. x 0.1 mm [0.035 in.] wall thickness, depending on configuration.)
- Stainless steel 12 mm (1/2 in.) fittings for optional enclosure purge.

Tools symbols

Symbol	Description	Symbol	Description
	T20 Torx screwdriver		3 mm Flat blade screwdriver
	24 mm Open-ended wrench		#2 Phillips screwdriver
	Tape measure		10 mm Hex driver
	Pencil		Level

Lifting/Carrying the Analyzer

SpectraSensors recommends two individuals to lift and/or move the analyzer.

Never lift the analyzer by the controller enclosure or conduit runs, cable glands, cables, tubing or any other part protruding through the enclosure wall or edge of the panel or enclosure. Always carry the load using the following points/method shown under Mounting the Analyzer below.

Mounting the Analyzer

The J22 is manufactured for wall mount installations. Refer to the layout diagrams in the Operator's Manual provided with the analyzer for detailed mounting dimensions.



Mounting hardware used for wall-mounting the J22 TDLAS Gas Analyzer must be able to support four times the weight of the instrument (approximately 16 kg (36 lbs) to 43 kg (95 lbs) depending on configuration).



The J22 analyzer is designed for operation within the specified ambient temperature range. Intense sun exposure in some areas may impact the temperature inside the analyzer controller, therefore, SpectraSensors recommends a sunshade or canopy be installed over the analyzer for outdoor installations in cases where the rated temperature range could be exceeded.




When mounting the analyzer, be sure to position the instrument so that it is not difficult to operate adjacent devices.

1. Install the bottom two mounting bolts to the mounting frame or wall. Do not fully tighten the bolts. Leave approximately a 10 mm (1/4 in.) gap to slide the analyzer mounting tabs onto the bottom bolts.
2. Lift the analyzer vertically at the points shown in the figure below.




Distribute the weight evenly among personnel to avoid injury.

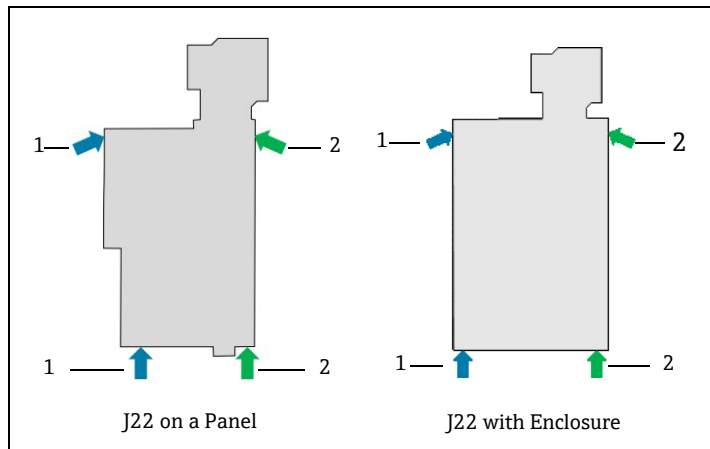

1 Person one hand positions

2 Person two hand positions

3. Lift the analyzer onto the bottom bolts and **slide the** slotted bottom mounting tabs over the bolts. Allow the two bottom bolts to take the weight of the analyzer while stabilizing in a vertical orientation.

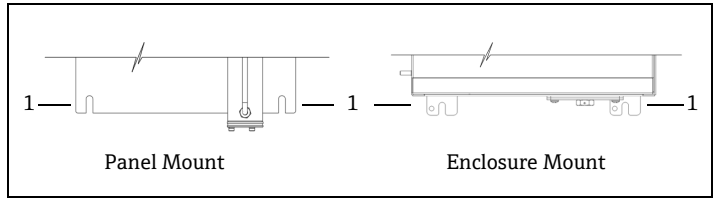

1 Slotted tabs

4. Tilt the analyzer and push it towards the mounting frame or wall while aligning the two top bolts.
5. While one person exerts the necessary pressure to hold the analyzer to the frame or wall, the second person secures the two top bolts.
6. Tighten all four bolts.

Opening/Closing the Analyzer Enclosure



Hazardous voltage and risk of electric shock. Failure to properly ground the analyzer may create a high-voltage shock hazard.

Protective Chassis and Ground Connections

Before connecting any electrical signal or power, the protective and chassis grounds must be connected.

- Protective and chassis grounds must be of equal or greater size than any other current-carrying conductors, including the heater located in the sample conditioning system
- Protective and chassis grounds to remain connected until all other wiring is removed
- Protective grounding wire current carrying capacity must be at minimum the same as the main supply
- Earth bonding/chassis ground shall be at least 6 mm² (10 AWG)


Protective ground cable

- Analyzer: 2.1 mm² (14 AWG)
- Enclosure: 6 mm² (10 AWG)


The grounding impedance must be less than 1 Ω.

Ground connections

Analyzer

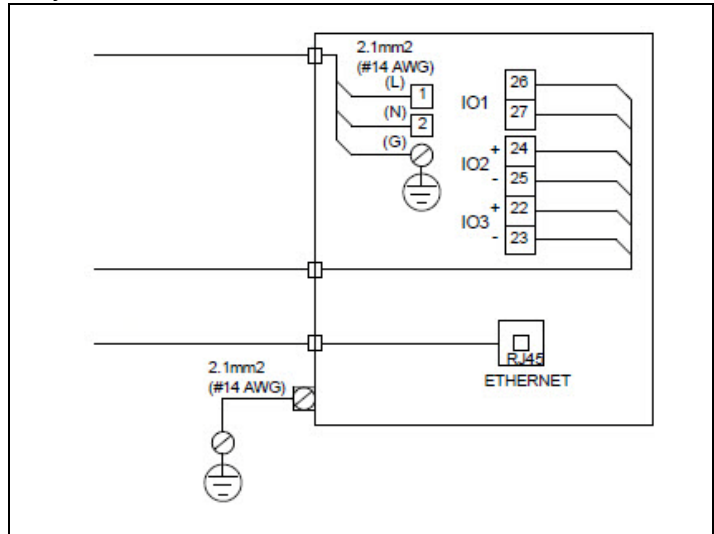

Enclosure, Sample Conditioning System

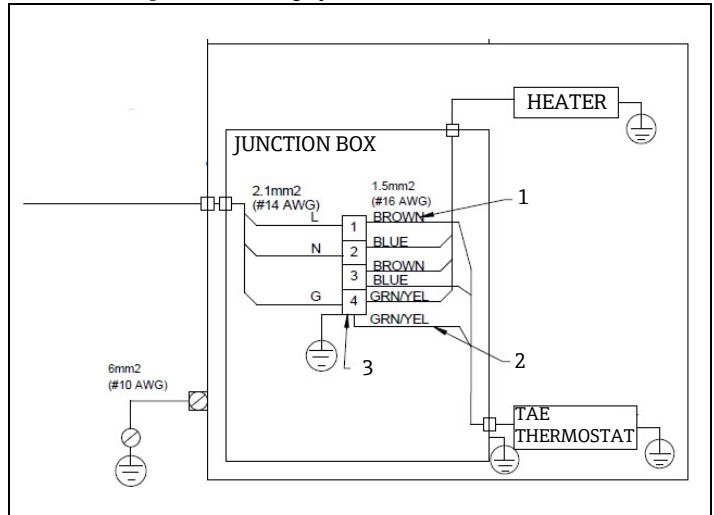

- 1 Blue wire is used in "TS" thermostat phase, no ground wire
- 2 Remove ground wire for CSA
- 3 Use copper wire only

Electrical Wiring Requirements



*Field wiring (Power and Signal) shall be accomplished using wiring methods approved for hazardous locations as per the Canadian Electrical Code (CEC) Appendix J, the National Electric Code (NEC) Article 501 or 505 and IEC 60079-14. The installer is responsible for complying with all local installation codes. **Use copper conductors only.***

For models of the J22 TDLAS Gas Analyzer with SCS mounted within an enclosure, the inner sheath of the supply cable for the heater circuit shall be sheathed with thermoplastic, thermosetting, or elastomeric material. It shall be circular and compact. Any bedding or sheath shall be extruded. Filters, if any, shall be non-hygroscopic.

Wire temperature rating and torque

- -40 °C to 105 °C
- Terminal block screw torque: 1.2 N m (10 in-lbf)

Cable entries

After installing all interconnecting wiring or cabling, make sure any remaining conduit or cable entries are plugged with certified accessories according to the intended use of the product.




Thread lubricant must be applied on all conduit hub threaded connections. SpectraSensors recommends using Syntheses Glep1 or equivalent lubricant on all conduit screw thread.



Conduit seals and glands specific to the application should be used where appropriate in compliance with local regulations.

Threaded entries

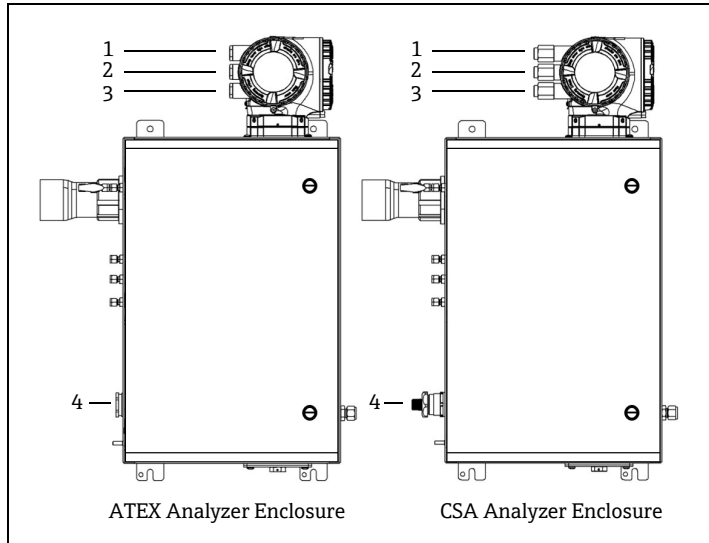

Cable Entry	Description	ATEX, IECEx	cCSAus
1	Controller power	M20 x 1.5	1/2 in. NPTF
2	Modbus output	M20 x 1.5	1/2 in. NPTF
3	(2) Configurable IO	M20 x 1.5	1/2 in. NPTF
4	Heater power (optional)	M25 x 1.5	1/2 in. NPTM



Threaded entry locations for the panel configuration are the same as shown for the enclosed sample system above.

Connection Values: Signal Circuits

Terminal assignment

Controller: supply voltage, outputs

Supply Voltage		Input/Output 1		Input/Output 2		Input/Output 3	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
Device-specific terminal assignment: adhesive label in terminal							

Safety-related values

Refer to “Analyzer Technical Specifications” on page 6.

Modbus interface cable specification

Cable type	A
Characteristic impedance	135 to 165Ω at a measuring frequency of 3 to 20 MHz
Cable capacitance	< 30 pF/m
Wire cross-section	> 0.34 mm ² (22 AWG)
Cable type	Twisted pairs
Loop resistance	≤ 110Ω/km

Electrical Circuit Breakers

An approved switch or circuit breaker rated for 10 amps should be used and clearly marked as the disconnecting device for the analyzer.



This switch or breaker shall not interrupt the protective earth conductor.



If the breaker in the customer-provided power distribution panel or switch is the primary means of disconnecting the power from the analyzer, SpectraSensors recommends that the power distribution panel be located in close proximity to the equipment and within easy reach of the operator.

Connecting the Gas Supply

Consult the layout and flow diagrams in the system drawings in the Operator's Manual for supply and return port locations. All work must be performed by technicians qualified in pneumatic tubing.



Process samples may contain hazardous material in potentially flammable and/or toxic concentrations. Personnel should have a thorough knowledge and understanding of the physical properties and safety precautions for the sample contents before connecting the gas supply.

Sample System Heater

The purpose of the optional heater is to maintain the temperature of the sample system to avoid condensation in cold weather.

Manufacturer	Intertec
Power	AC 100-240 V tolerance \pm 10%, 50/60 Hz, 80W
Ingress Protection	IP 68

4 Equipment Operation



The safety of the analyzer is the responsibility of the installer and the organization he/she represents.



Mounting hardware used for wall-mounting the J22 must be able to support four times the weight of the approximately 19 kg (40 lbs) to 43 kg (95 lbs) depending on configuration).

Operating Controls

The J22 is operated using the optical touch pad. Basic operating parameters are provided in the Operator's manual. See "Associated Documentation" on page 1. for documentation part numbers.

Commissioning

1. Power system on.
2. Set flow rates and pressure for system as specified in the system drawings provided in the Operator's manual.
3. Ensure sample vent has an unrestricted connection to atmosphere or flare, as specified.



The temperature of the process medium shall be within the ambient temperature rating of the equipment.



Do not exceed specified pressure setting or equipment damage may occur.

Decommissioning

Intermittent operation

If the analyzer is to be stored or shut down for a short time period, follow the instructions for isolating the measurement cell and sample conditioning system (SCS).

1. Shut off the process gas flow.
2. Allow all residual gas to dissipate from the lines.
3. Connect a nitrogen (N₂) purge supply, regulated to the specified sample supply pressure, to the sample supply port.
4. Confirm that any valves controlling the sample flow effluent to the low pressure flare or atmospheric vent are open.
5. Turn on the purge supply to purge the system and clear any residual process gases.
6. Turn off the purge supply.
7. Allow all residual gas to dissipate from the lines.
8. Close any valves controlling the sample flow effluent to the low pressure flare or atmospheric vent.
9. Disconnect power to the system.



Confirm the power source is disconnected at the switch or circuit breaker. Make sure the switch or breaker is in the "OFF" position and locked with a padlock.

10. Confirm all digital/analog signals are turned off at the location from which they are being monitored.
11. Disconnect the phase and neutral wires from the analyzer.
12. Disconnect the protective ground wire from the analyzer system.
13. Disconnect all tubing and signal connections.
14. Cap all inlets and outlets to prevent foreign material such as dust or water from entering the system).
15. Ensure the analyzer is free from dust, oils or any foreign material. Follow instructions found in “To clean the J22 exterior”.
16. Pack the equipment in the original packaging in which it was shipped, if available. If the original packaging material is no longer available, the equipment should be adequately secured (to prevent excessive shock or vibration).
17. If returning the analyzer to the factory, complete the Decontamination Form provided by SpectraSensors and attach to the outside of the shipping package as instructed before shipping. Refer to **“Service Contact” on page 18.**

5 Maintenance and Service



Mounting hardware used for wall-mounting the J22 must be able to support four times the weight of the approximately 19 kg (40 lbs) to 43 kg (95 lbs) depending on configuration).

Cleaning and Decontamination

To clean the J22 exterior

The housing should be cleaned only with a damp cloth to avoid electrostatic discharge.



Never use vinyl acetate, acetone or other organic solvents to clean the analyzer housing or labels.

Troubleshooting and Repairs

Any repairs carried out by the customer or on behalf of the customer must be recorded in a site dossier and kept available for inspectors.

Replacing the membrane separator filter

Make sure that a membrane separator filter is operating normally. If liquid enters the cell and accumulates on the internal optics, a **Laser DC power too low** fault will result.

1. Close the sample supply valve.
2. Unscrew the cap from the membrane separator.

If the membrane filter is dry:

3. Check if there are any contaminants or discoloring of the white membrane.
If yes, the filter should be replaced.
4. Remove the O-ring and replace the membrane filter.
5. Replace the O-ring on top of the membrane filter.
6. Place the cap back onto the membrane separator and tighten.
7. Check upstream of the membrane for liquid contamination and clean and dry out before re-opening the sample supply valve.

If liquid or contaminants are detected on the filter:

3. Drain any liquids and clean with isopropyl alcohol.
4. Clean any liquids or contaminants from the base of the membrane separator.
5. Replace the filter and the O-ring.
6. Place the cap onto the membrane separator and hand-tighten.
7. Check upstream of the membrane for liquid contamination and clean and dry out before re-opening the sample supply valve.

Enclosure purge (optional)



The optional enclosure purge is typically elected when the sample gas contains high concentrations of H₂S.

When maintenance of the J22 is required, follow one of the two methods described below prior to opening the enclosure door.

With a gas sensor:



Ensure an appropriate sensor is used based on the toxic components in the process gas stream.

1. Allow the sample gas to continue flowing through the system.
2. Open the tee-fitting cap on the exhaust port on the lower right side of the enclosure and insert a sensor to determine if there is H₂S inside the enclosure.
3. If no hazardous gas is detected, proceed with opening the enclosure door.
4. If hazardous gas is detected, follow the instructions below for purging the enclosure.

If no appropriate gas sensor is available:

1. Turn off the sample gas to the system.
2. Connect the purge gas to the purge inlet on the upper right side of the enclosure.
3. Open the exhaust on the bottom right side of the enclosure and connect a piece of tubing that vents to safe area.
4. Input the purge gas at 5 liters per minute.
5. Operate the purge for 22 minutes.

Sample system purge (optional)

1. Shut off gas to the analyzer.
2. Ensure the vent and bypass, if present, are open.
3. Purge the sample conditioning system before performing a validation or beginning operation after an upset.
4. Set the flow rate to 1 liter per minute and run the purge for at least 4 minutes for safety, and until the moisture reading is below an acceptable error level.

Repair verification

When repairs have been completed correctly, alarms will clear from the system.



Residual risk: Some capacitors may remain charged with high voltage in the case of a single fault. Allow 10 minutes before controller covers are opened.

Power termination covers

Confirm the termination cover is closed before initiating operation or after a repair event. Should the cover become damaged, it must be replaced to avoid potential safety risk.

Spare Parts

All parts required for operation of the J22 TDLAS Gas Analyzer must be supplied by SpectraSensors or an authorized agent. Refer to the J22 TDLAS Gas Analyzer Operating Instructions (P/N 4900002277) for a complete list of available spare parts.

Service Contact

For Service, refer to our website (<https://www.spectrasensors.com/contact>) for the list of local sales channels in your area.

Index

A

Analyzer return Decontamination Form	22
---	----

C

Chemical compatibility	12
Cleaning	
Acetone	25
Vinyl acetate	25

D

Discharge	
Electrostatic	12

E

Electrostatic discharge	12
-------------------------------	----

F

Faults	
Laser DC Power Too Low	25

H

Hazards	
Electrocution	9, 21
Personnel risks	8

M

Membrane separator	25
--------------------------	----

S

Safety equipment	13
Safety rating	
Tools	9

4900002275/EN/01.21

www.spectrasensors.com
